

ATTACHMENT TO SAMMITR'S MANUFACTURER'S WARRANTY FOR SMM STEEL CANOPIES

Dated 12 May 2014

INSTRUCTIONS FOR CARE AND MAINTENANCE OF SMM STEEL CANOPY PRODUCTS

IF THESE CARE AND MAINTENANCE GUIDELINES ARE NOT ADHERED TO, THEN THE SAMMITR MANUFACTURER'S WARRANTY WILL NOT APPLY

1 Clamps and Bolt/Nut Assembly

Inspect the mounting clamps or bolts that hold the canopy to the vehicle one month after installation date - check that they are still fastened correctly. If travelling on sealed roads only, inspect the mounting clamps or bolts that hold the canopy to the vehicle every three months to ensure that the connections are still sound and not loose.

NOTE: When travelling off-road or on unsealed and rough roads on a regular basis, re-check mounting clamps or bolts at a minimum of every month or as required ensuring the connections are still sound and not loose.

The four securing clamps or bolt/nut assembly (dependent upon installation method) are located under the rubber grommets, two on each side of the canopy. Remove the grommets and check the clamps or bolt/nut assembly. If the clamps or bolt/nut assembly can be shifted or twisted upon application of gentle sideways or twisting finger pressure, they require tightening. See your *Authorised Dealer* immediately to tighten the clamps or bolt/nut assembly. In an emergency situation and only if safe to do so, you may tighten the clamp or bolt/nut assembly sufficiently to secure the canopy in order to safely drive it to your *Authorised Dealer*.

Before tightening, ensure the canopy is still in the correct position of the vehicle. The tension setting for the clamps is 7nm torque, this is a 'light tension'. If clamps or bolt/nut assembly are damaged or deformed during installation or use in any way they, they must be replaced with *SAMMITR* Spares from the *Authorised Dealer*. Damage to the canopy or the vehicle may result if this condition is not rectified quickly. Any ensuing damage due to poor installation or negligence will not be covered under this *Warranty*.

2 Roof Rails

The roof and roof rails provided can support up to 100kg of vertical and side load if properly secured. The load weight should be distributed evenly along both rails. Do NOT place full load on a single rail or a single point along the rail as damage may result and will not be covered by *this Warranty*.

NOTE—USE ORIGINAL SPARE PARTS, DO NOT OVER-TIGHTEN (CLAMPS, BOLT/NUT and ROOF RAILS)

Please note, any damage to the parts, the vehicle or canopy caused by use of non-genuine *SAMMITR* parts and over-tightening of clamps, bolt/nut assemblies is not covered under this *Warranty*.

Any damage to canopy or accessories caused by use of non-genuine *SAMMITR* parts and over-tightening of bolts securing the roof rails to the canopy or use of non *SAMMITR* approved bolts is not covered under this *Warranty*.

3 Drainage Holes

Check drainage holes regularly on the bottom section of the window to ensure they remain clear of any debris, so that water can escape from the window channels. Do not allow drainage holes to remain blocked.

4 Cleaning Exterior

Keep the exterior of the canopy clean and free from bird droppings, dirt and dust build up and foreign contaminants or harsh chemicals. Do not use any abrasive materials when cleaning the canopy or glass, use approved and mild motor vehicle cleaning or polishing products recommended by the vehicle manufacturer for cleaning your vehicle. High-pressure washers are not to be used too close to the canopy as damage to the paint and seals may occur and will not be covered under this *Warranty*.

Seals - Clean rubber seals in and around the window and door seals regularly using a warm damp cloth and a small amount of mild automotive car wash. Do not allow dust or dirt build up in and around rubber window and door seals or on canopy surfaces as they will act as abrasives and damage the seals and the paint on the vehicle or canopy. These are not covered by *this Warranty*.

5 Moving Parts (Locks and Hinges)

Regularly lubricate lock and key recess on rear tailgate and side window locks using a suitable lubricant (suggest TRI-FLOWTM "Superior Lubricant"). Regularly Lubricate door hinges (suggest TRI-FLOWTM "Red Grease"). Frequency of lubrication is dependent upon use. Under normal use (<10 times per day), lubrication every 3 months is sufficient. For frequent and heavy use, monthly lubrication is recommended.

6 Rear Canopy Door Side stoppers

The two rear tailgate stoppers are adjusted at installation to secure the rear tailgate door from sideways movement, especially during vehicle operation. Check the position of the stoppers at installation. If the stoppers have loosened or if the rear tailgate door is able to move sideways when closed or vibrates under vehicle operation, return the vehicle to the *Authorised Dealer* immediately for adjustment - this is part of the *Authorised Dealer's* and *Installer's* responsibility. Six monthly inspections are recommended under normal domestic use and for commercial use, inspection every month is recommended.

Damage to the canopy or the vehicle may result if this condition is not rectified quickly. Any ensuing damage due to poor installation or negligence will not be covered under this *Warranty*.